

DF453 / 454 Installation Instructions

Product Code: DF453/4



Contents:

1. 1 x fountain and bottle filler body
2. 2 x waste fittings (discard the gratings part 2a)
3. 2 x flexible waste pipes
4. 1 x waste tee
5. 1 x bubbler tap
6. 1 x bottle filling tap
7. 2 x washers
8. 1 x brass tap connector

Step 1:

Fit the two waste fittings (part 2) to the two waste pressings in the drinking fountain bowl and the bottle filling recess. Place the screw through the central hole and tighten the plastic waste body to the underside of the waste pressings.



 
Step 2:

Screw the two flexible waste pipes (part 3) to the two waste fittings. Fit the other ends of the two flexible waste pipes into the waste tee (part 4).



Step 3:

Fit the bubbler tap (part 5) to the 22mm hole in the top of the fountain.

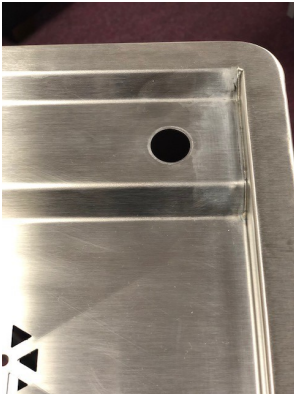

Step 4:

Fit the bottle filling tap (part 6) to the 22mm hole in the rear of the bottle filling recess, place the two washers (part 7) over the tap thread on the rear side of the bottle filling recess. Screw the brass tap connector (part 8) onto the tap thread and tighten.



Step 5:

If fitting against a wall remove and discard the rear panel (if supplied). If to be used as a pedestal unit retain the rear panel. Fix the unit to the floor and rear wall with appropriate wall fixings (not supplied).

Step 6:

Connect the buildings water supply to the bubbler tap (1/2" connection) and the bottle filling tap (15mm compression fitting). Remember to flush any new pipework to remove debris before connecting to the tap and bubbler.

Connect the waste tee to the buildings waste pipework.

Test for leaks and adjust the water flow to the bubbler tap with the integral adjustment screw. We advise fitting an inline Y strainer or filter to the water inlet pipework to protect the tap and bubbler from water borne debris. The water flow rate to the bottle filling tap can be adjusted through the hole in behind the indices with the allen key provided—full instructions are supplied in the tap box.

Step 7:

Remove any protective coating from the stainless steel, clean thoroughly with warm soapy water to remove any residues from the protective coating and the installation.